


## Quick guide — — Overview buttons and guidance screen

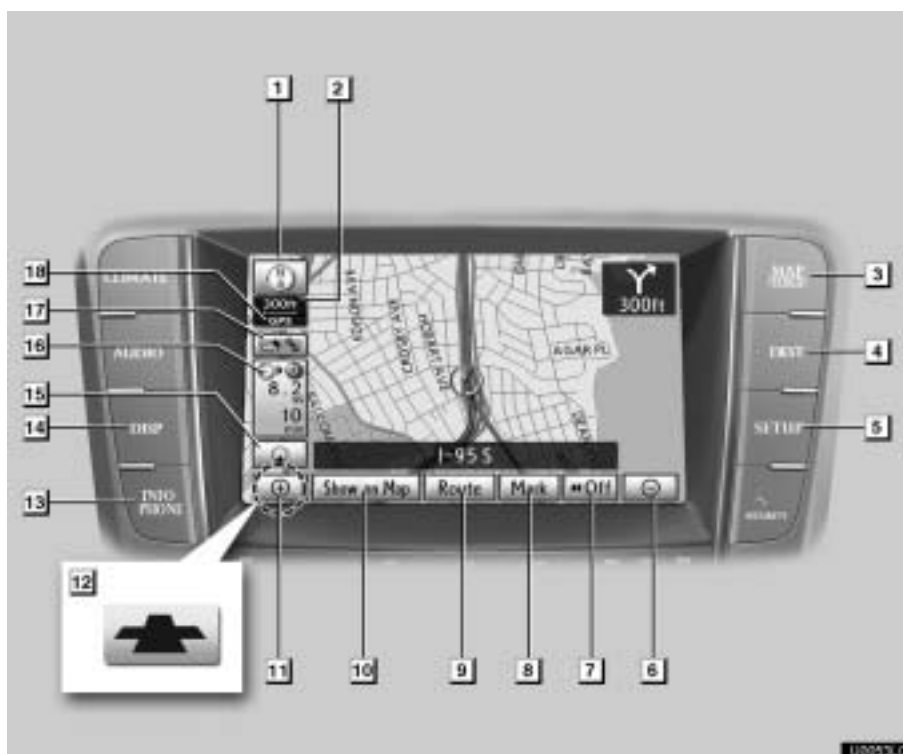

| No. | Name                                 | Function   | Page                                       |
|-----|--------------------------------------|--|--|
| 1   | <b>North-up or heading-up symbol</b> | This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.      | 43   |
| 2   | <b>Scale indicator</b>               | This figure indicates the map scale.   | 42   |
| 3   | <b>“MAP/VOICE” button</b>            | Push this button to repeat a guidance voice, cancel the map scroll, start guidance and display the current position. | 33   |
| 4   | <b>“DEST” button</b>                 | Push this button to display the “Destination” screen.  | 7, 9, 11, 12, 13, 62                       |
| 5   | <b>“SETUP” button</b>                | Push this button to display the “Setup” screen.  | 22, 110, 296, 300, 302, 305, 314, 353, 360 |
| 6   | <b>Zoom out button</b>               | Touch this button to reduce the map scale.   | 42   |

| No.       | Name  | Function  | Page                   |
|-----------|---|---|------------------------|
| <b>7</b>  | <b>“◀◀Off”</b>                                | Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching <b>“On▶▶”</b> . | 311                    |
| <b>8</b>  | <b>“Mark”</b>                                 | Touch this button to register the current position or the cursor position as an address book entry.   | 35                     |
| <b>9</b>  | <b>“Route”</b>                                | Touch this button to change the route.  | 94, 96                 |
| <b>10</b> | <b>“Show on Map”</b>                          | Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.    | 102, 170               |
| <b>11</b> | <b>Zoom in button</b>                         | Touch this button to magnify the map scale.   | 42                     |
| <b>12</b> | <b>Foot print map button</b>                  | Touch this button to display the foot print map and the building information.   | 42                     |
| <b>13</b> | <b>“INFO/PHONE” button</b>                    | Push this button to display the “Information” screen.   | 23, 134, 149, 166, 381 |
| <b>14</b> | <b>“DISP” button</b>                          | Push this button to display the “Display” (quality control) screen.   | 31                     |
| <b>15</b> | <b>Screen configuration button</b>            | Touch this button to change the screen mode.  | 39                     |
| <b>16</b> | <b>Distance and time to destination</b>       | Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.                               | 93                     |
| <b>17</b> | <b>XM® indicator</b>                          | This mark is displayed when XM® information is received.  | 170                    |
| <b>18</b> | <b>“GPS” mark (Global Positioning System)</b> | Whenever the vehicle is receiving signals from the GPS, this mark is displayed.   | 370                    |

## — Registering home



**1 Push the “DEST” button.**



**2 Touch “Go Home”.**

If home has not been registered, you can register it by touching “Go Home”.



**3 Touch “Yes”.**




**4 There are 4 different methods to search your home.**

See “Destination search” on page 62.



##### 5 Touch "Enter".

The "Edit Home" screen is displayed.

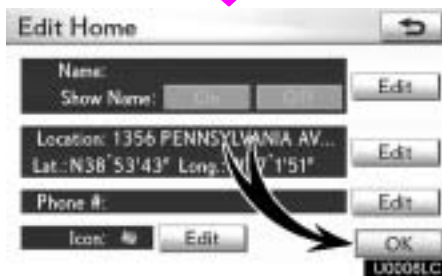

##### 6 Touch "OK".

Registration of home is complete.

You can also register home by pushing the "SETUP" button. (See " (a) Registering home" on page 111.)

You can change the name, location, phone number and icon. (See " (b) Editing home" on page 112.)

## — Registering preset destinations



**1 Push the “DEST” button.**



**2 Touch one of the preset destination buttons.**

You can set a preset destination to any preset destination button that has not yet been set.



**3 Touch “Yes”.**



**4 There are 4 different methods to search preset destinations.**

See “Destination search” on page 62.



##### 5 Touch "Enter".

The "Edit Preset Destination" screen is displayed.

##### 6 Touch "OK".

Registration of preset destinations is complete.

You can also register preset destinations by pushing the **"SETUP"** button. (See "(a) Registering preset destinations" on page 114.)

You can change the name, location, phone number and icon. (See "(b) Editing preset destinations" on page 115.)

The registered points can be used on the "Destination" screen. (See "— Destination search by Preset destinations" on page 64.)

## — Operation flow: guiding the route



**1 Push the “DEST” button.**



**2 There are 10 different methods to search destinations.**

See “Destination search” on page 62.



**3 Touch “Go to” .**

The navigation system performs a search for the route.



**4 Touch “OK”, and start driving.**

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 83.)

**5 Guidance to the destination is given via voice and on the guidance screen.**

## — Setting home as the destination




**1 Push the “DEST” button.**




**2 Touch “Go Home”.**

“Go Home” can be used if your home has been registered. (To register “Home”, see “(a) Registering home” on page 111.)

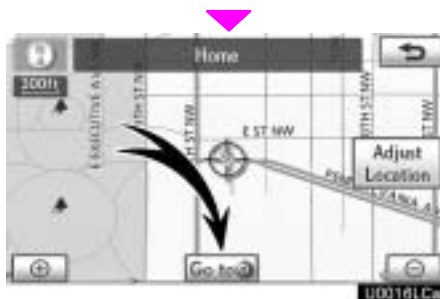

**3 Touch “Go to”.**

The navigation system performs a search for the route.

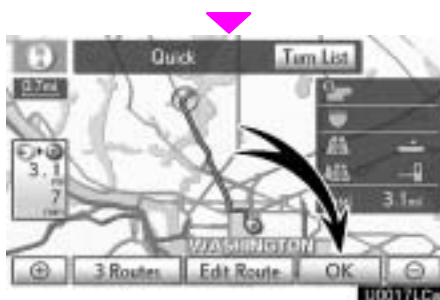

**4 Touch “OK”, and start driving.**

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 83.)

**5 Guidance to the destination is given via voice and on the guidance screen.**